

SPARE PARTS EXPLODED VIEW GAS WALL BOILERS

Model

CENTORA

R8202565-11 - 23/03/2012


EN	FR	IT	ES	DE
----	----	----	----	----

CENTORA


Domestic Gas Boilers


1	200005779031	CENTORA 1.14 CF NAT	07/01	11/07
2	200007779031	CENTORA 3.14 CF NAT	07/01	11/07
2	3650045	CENTORA 3.14 CF NAT	02/05	11/07
3	200007779036	CENTORA 3.14 VMC NAT	07/01	11/07
4	200005781031	CENTORA 1.24 CF NAT	01/02	11/07
5	200005781037	CENTORA 1.24 FF NAT	01/02	11/07
6	200006781031	CENTORA 2.24 CF NAT	11/01	11/07
6	200006781021	CENTORA 2.24 CF B/P	11/01	11/07
6	200006781041	CENTORA 2.24 CF GPO	07/02	11/07
7	200006781036	CENTORA 2.24 VMC NAT	06/01	11/07
7	200006781046	CENTORA 2.24 VMC GPO	04/02	11/07
8	200006781037	CENTORA 2.24 FF NAT	11/01	11/07
8	200006781027	CENTORA 2.24 FF B/P	11/01	11/07
8	200006781047	CENTORA 2.24 FF GPO	08/02	11/07
9	200007781031	CENTORA 3.24 CF NAT	04/02	11/07
9	3650046	CENTORA 3.24 CF NAT	02/05	01/08
10	200007781036	CENTORA 3.24 VMC NAT	04/02	11/07
11	200007781037	CENTORA 3.24 FF NAT	04/02	11/07
11	3650047	CENTORA 3.24 FF NAT	02/05	11/07
12	200006783031	CENTORA 2.28 CF NAT	11/01	11/07
13	200006783021	CENTORA 2.28 FF B/P	07/01	11/07

Col	Reference	Model type	Begin	End
-----	-----------	------------	-------	-----

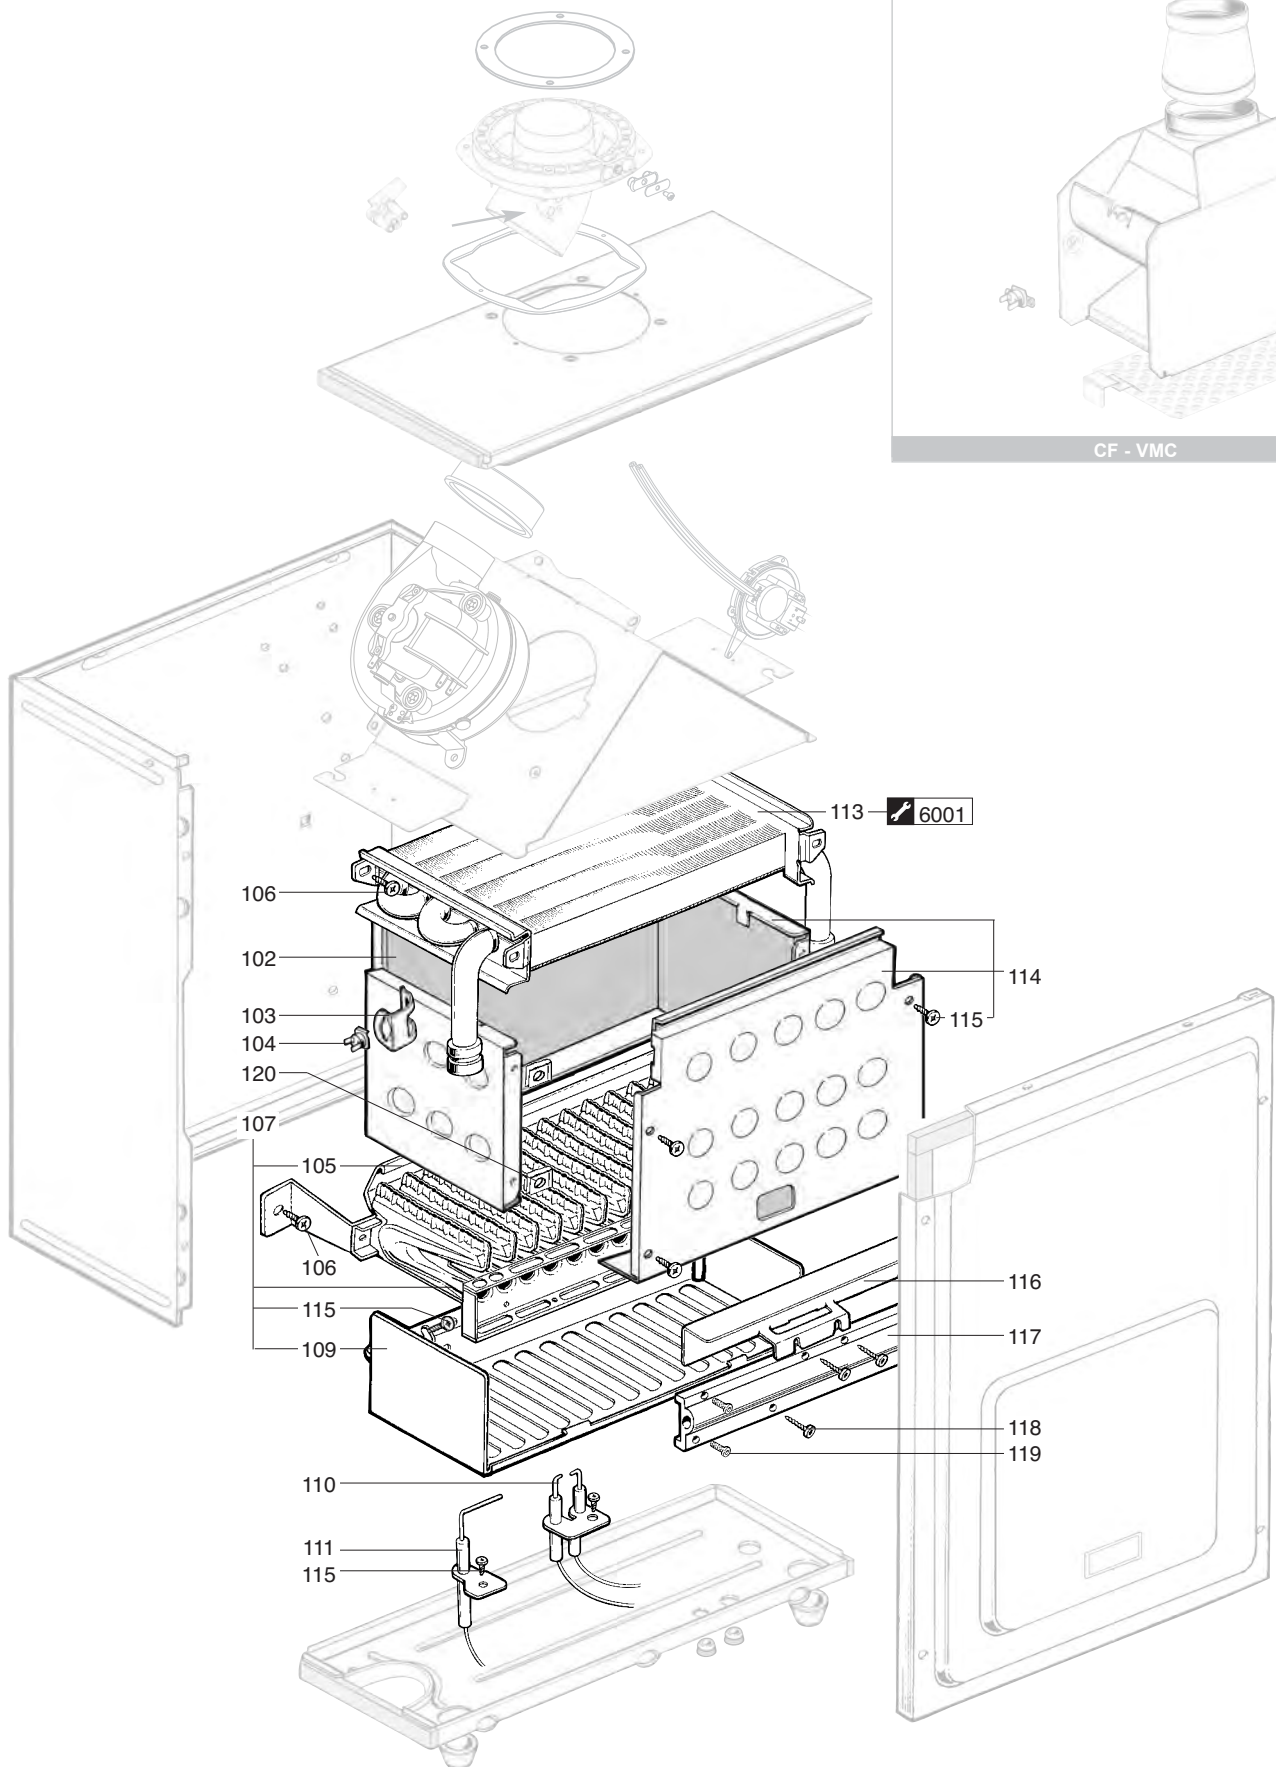


	Description	Manf. Pt. N	Type	CENTORA 1.14 CF CENTORA 3.14 CF CENTORA 3.14 VMC CENTORA 1.14 CF CENTORA 1.14 FF CENTORA 2.24 CF CENTORA 2.24 VMC CENTORA 2.24 FF CENTORA 3.24 CF CENTORA 3.24 VMC CENTORA 3.24 FF CENTORA 2.28 CF CENTORA 2.28 FF 31																	
				1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
0100	BURNER ASSEMBLY																				
0102	COMBUSTION CHAMBER LINING KIT	60081722		•	•	•	•	•	•	•	•	•	•	•							
0103	CLIP	61010050		•	•	•	•	•	•	•	•	•	•	•							
0104	OVERHEAT THERMOSTAT 105C	61010191		•	•	•	•		•	•		•	•		•						
	OVERHEAT THERMOSTAT 100C	61010572						•			•			•		•					
0105	CROSS LIGHTING STRIP	61002811						•			•			•			•				
	CROSS LIGHTING STRIP	61010038		•	•	•	•		•	•		•	•		•						
0106	TAPPING SCREW CBLSX D: 6.3-13	61010648		•	•	•	•	•	•	•	•	•	•	•	•						
0107	BURNER HEAD	61010415		•	•	•	•		•	•		•	•		•						
	BURNER HEAD	61010753						•			•			•		•					
0109	GRILLE	61010223						•			•			•		•					
0110	IGNITION ELECTRODE	61015740	AP						•	•	•										
	IGNITION ELECTRODE	61002801	B/P-NAT	•	•	•	•	•	•	•	•	•	•	•	•			12/06			
	IGNITION ELECTRODE	61015740	B/P-NAT	•	•	•	•	•	•	•	•	•	•	•	•				11/06		
0111	IONIZATION ELECTRODE	61002802		•	•	•	•	•	•	•	•	•	•	•	•						
0113	HEAT EXCHANGER	61010017		•	•	•	•	•	•	•	•	•	•								
	HEAT EXCHANGER	61010754														•					
	HEAT EXCHANGER	61011136															•				
0114	COMBUSTION CHAMBER ASSY	60081721		•	•	•	•	•	•	•	•	•	•	•	•						
0115	TAPPING SCREW CBLSX D: 4.2-9.5	61010125		•	•	•	•	•	•	•	•	•	•	•	•						
0116	DEFLECTOR	61010392						•			•			•							
	DEFLECTOR	61011642															•				
0117	MANIFOLD 16 INJ.	61010175	B/P						•		•										
	MANIFOLD 16 INJ.	61010030	NAT	•	•	•	•		•	•		•	•		•						
	MANIFOLD 16 INJ.	61010341	NAT					•			•			•							
	MANIFOLD 16 INJ.	61011305	NAT														•				
0118	TAPPING SCREW CBLSX D: 4.2-25	61010128		•	•	•	•	•	•	•	•	•	•	•	•						
0119	SCREW HX M 5-12	61010131		•	•	•	•	•	•	•	•	•	•	•	•						
0120	SPIRE CLIP	60057488		•	•	•	•	•	•	•	•	•	•	•	•						

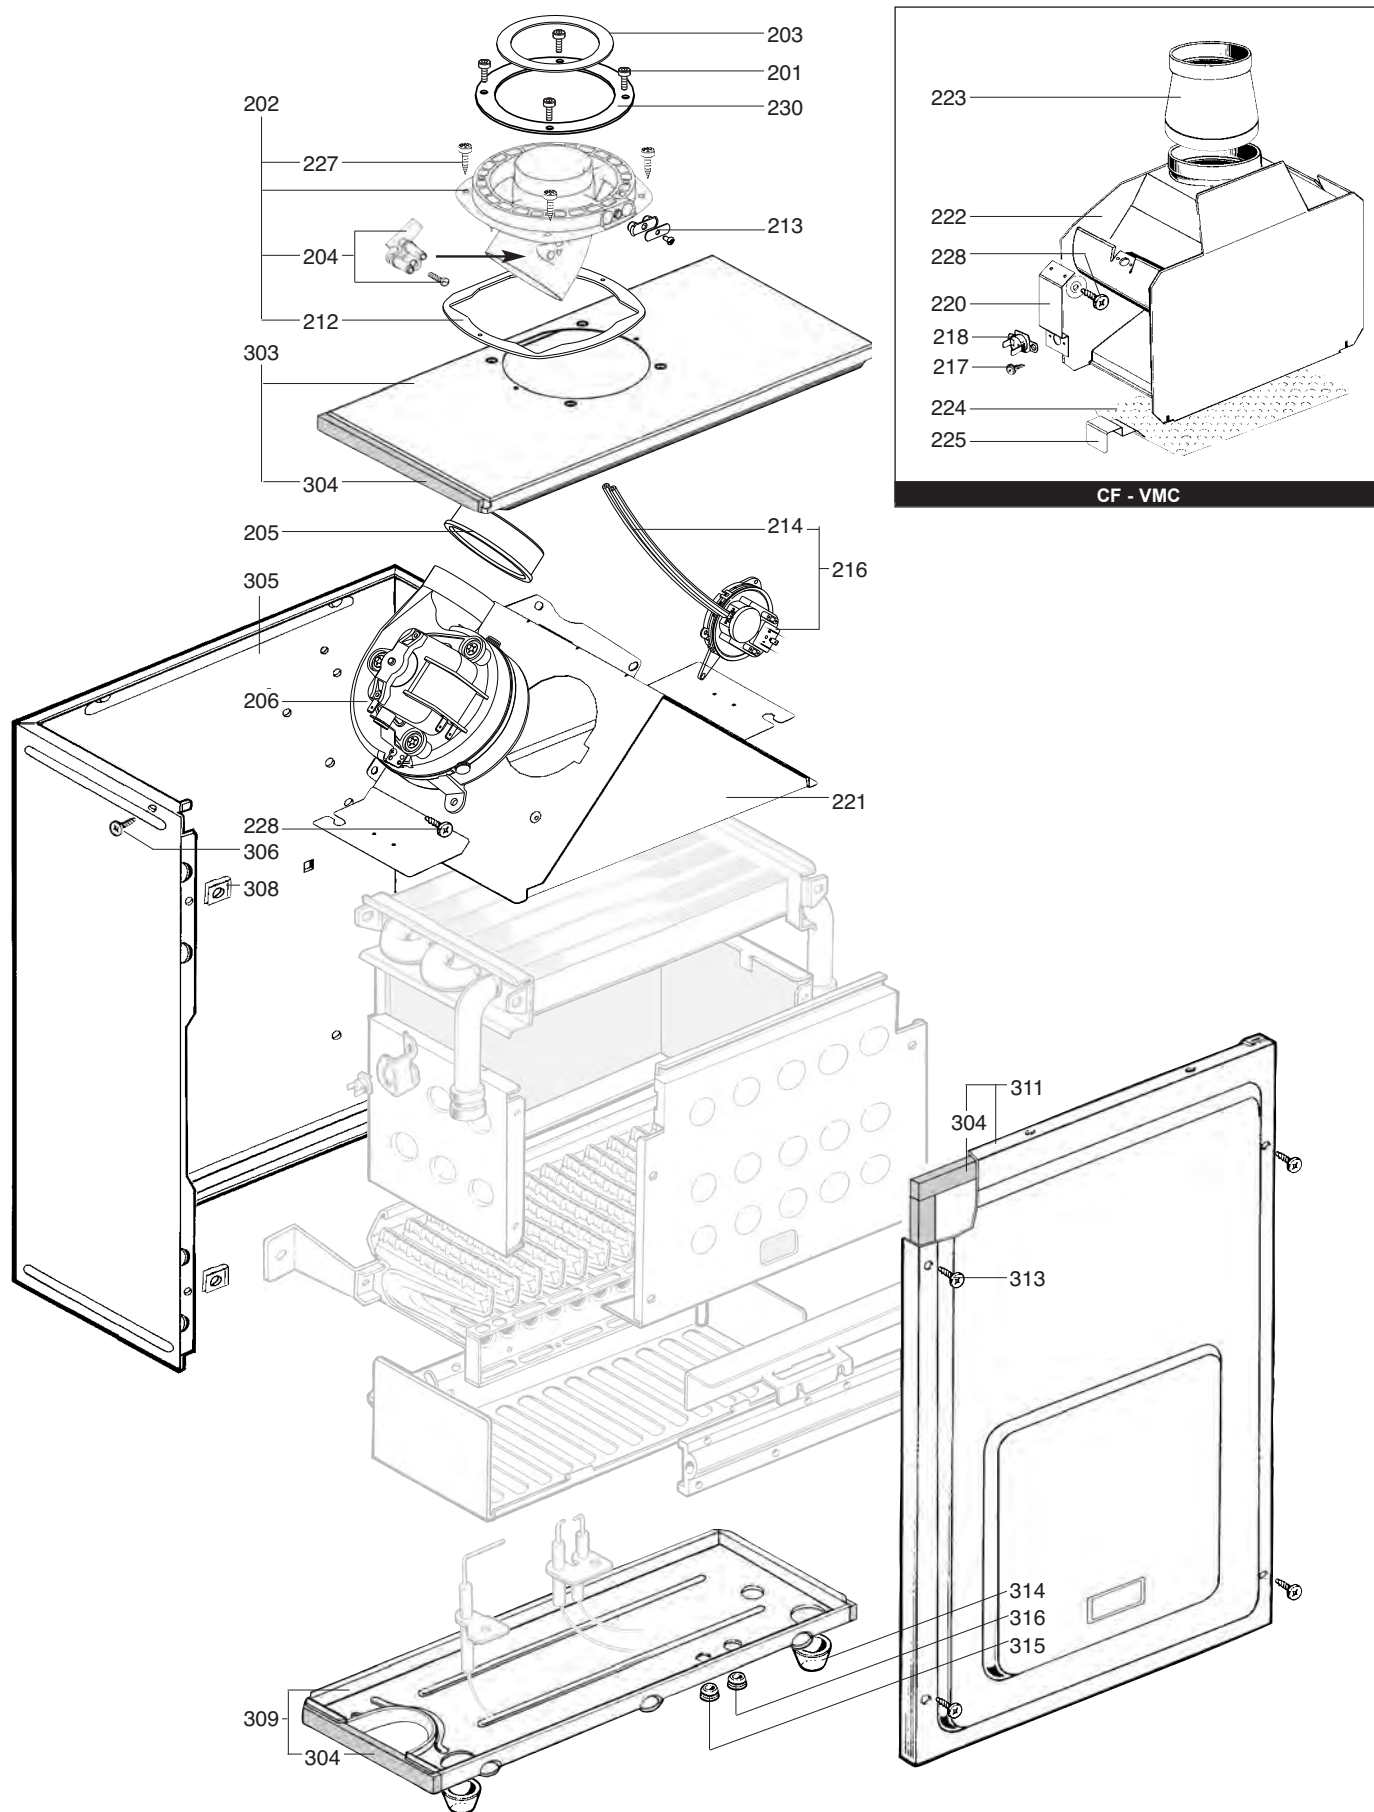


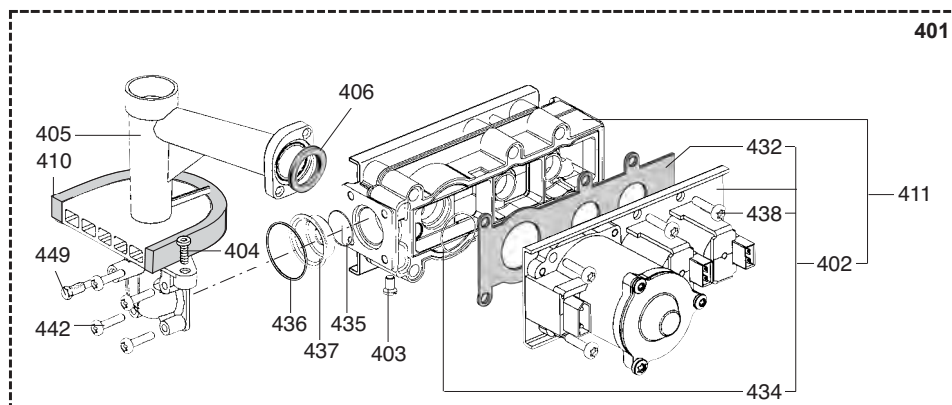

NAT - B/P

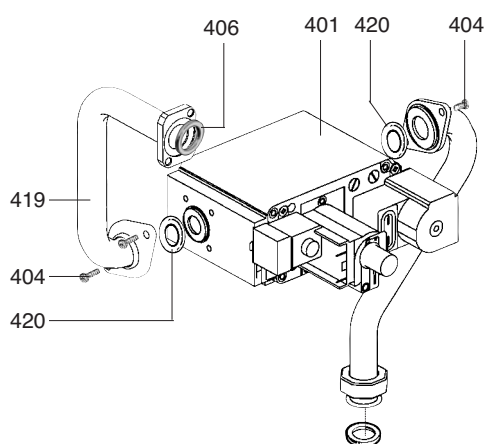


CF - VMC AP

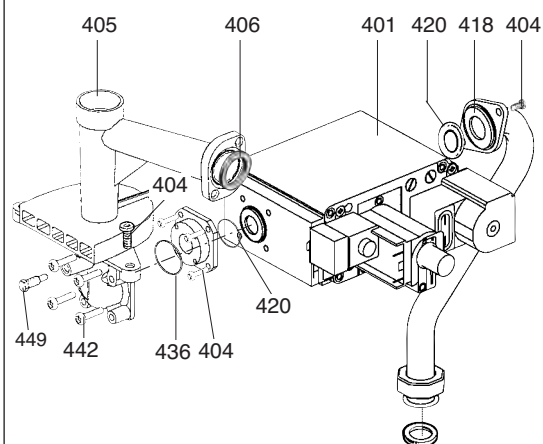

FF AP

... --> 11/06


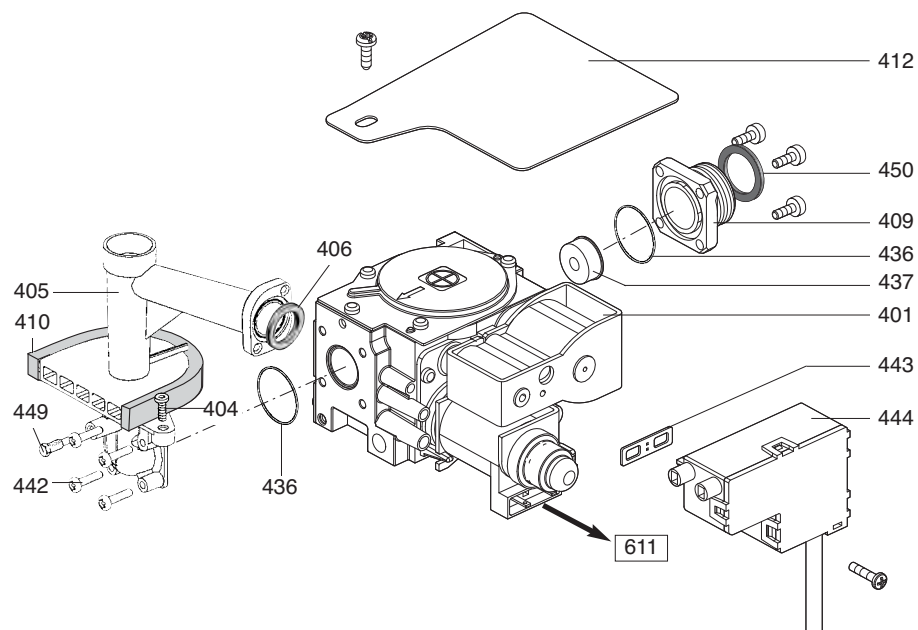


12/06 --> ...


CENTORA




	Description	Manf. Pt. N	Type																			31
				1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	
0500	HYDRAULIC BLOCK																					
0501	TUBE-EXCHAN TO 3-WAY VALVE	61010333		•	•	•	•	•	•	•	•	•	•	•	•	•						
0502	CLIP	61010012		•	•	•	•	•	•	•	•	•	•	•	•	•						
0503	O-RING D: 18.4-2.7	60024164-22		•	•	•	•	•	•	•	•	•	•	•	•	•						
0504	O-RING D: 17-4	60024164-51		•	•	•	•	•	•	•	•	•	•	•	•	•						
0505	THREE-WAY VALVE	61010000			•	•			•	•	•	•	•	•	•	•						11/06
	VALVE BLOCK ASSY	61010436		•			•	•														
	THREE-WAY VALVE	61305725			•	•			•	•	•	•	•	•	•	•						12/06
	THREE-WAY VALVE	61010000	AP						•	•	•											
0506	NUT M 5	61016604			•	•			•	•	•	•	•	•	•	•						12/06
0507	VALVE KIT	61303330			•	•			•	•	•	•	•	•	•	•						12/06
0508	MOTOR - THREE-WAY VALVE	60081953			•	•			•	•	•	•	•	•	•	•						11/06
	INTERFACE	61304003			•	•			•	•	•	•	•	•	•	•						12/06
	MOTOR - THREE-WAY VALVE	60081953	AP						•	•	•											
0509	DRAIN SCREW ASSY	60081028		•	•	•	•	•	•	•	•	•	•	•	•	•						
0510	THERMISTOR TEMP. SENSOR	61000733		•	•	•	•	•	•	•	•	•	•	•	•	•						11/06
	THERMISTOR TEMP. SENSOR	61314955		•	•	•	•	•	•	•	•	•	•	•	•	•						12/06
	THERMISTOR TEMP. SENSOR	61000733	AP						•	•	•											
0511	TEMPERATURE SENSOR CLIP	61002083		•	•	•	•	•	•	•	•	•	•	•	•	•						
0513	PLUG	61010485		•	•	•	•	•	•	•	•	•	•	•	•	•						
0514	JOINING PLATE	61010439		•			•	•														
	SHUNT PLATE	61010611			•	•						•	•	•	•							
	WATER / WATER HEAT EXCHANGER 14	61011164							•	•	•					•	•					
0515	SCREW CBLX M 5-40	61010129		•	•	•	•	•	•	•	•	•	•	•	•	•						
0516	CLIP	61010609		•	•	•	•	•	•	•	•	•	•	•	•	•						
0518	LEFT HAND HYDRAULIC BLOCK	61010003		•	•	•	•	•	•	•	•	•	•	•	•	•						
0520	BYPASS TUBE	61010044		•	•	•	•	•	•	•	•	•	•	•	•	•						
0521	TAPPING SCREW CBLX D: 6.3-19	61010127		•	•	•	•	•	•	•	•	•	•	•	•	•						
0522	CLIP	61010005		•	•	•	•	•	•	•	•	•	•	•	•	•						
0524	MOTOR - THREE-WAY VALVE	61302483-01			•	•	•		•	•	•	•	•	•	•	•						12/06
0525	PIN	61304002			•	•																12/06
0526	O-RING D: 8.9-2.7	61009834-14		•	•	•	•	•	•	•	•	•	•	•	•	•						
0528	HOT WATER BEND	61010056			•	•			•	•	•	•	•	•	•	•						
0529	HEATING FLOW BEND	61010057		•	•	•	•	•	•	•	•	•	•	•	•	•						
0530	SHEET GASKET D: 24-17-1.5	60061855-19		•	•	•	•	•	•	•	•	•	•	•	•	•						
0531	HYDRAULIC PLATE	61010042		•	•	•	•	•	•	•	•	•	•	•	•	•						
0532	WATER THROTTLE	60081471		•	•	•	•	•	•	•	•	•	•	•	•	•						
0535	BYPASS BODY	61016387		•	•	•	•	•	•	•	•	•	•	•	•	•						
0537	O-RING D: 13.6-2.7	60024164-18		•	•	•	•	•	•	•	•	•	•	•	•	•						
0538	CLIP	61010112		•	•	•	•	•	•	•	•	•	•	•	•	•						
0539	O-RING D: 1.9-8	61009833-34		•	•	•	•	•	•	•	•	•	•	•	•	•						
0540	ADJUSTING SCREW OF BY-PASS	61010111		•	•	•	•	•	•	•	•	•	•	•	•	•						
0542	CLIP	60079845		•	•	•	•	•	•	•	•	•	•	•	•	•						
0543	TAPPING SCREW CBLX D: 4.2-9.5	61010125		•	•	•	•	•	•	•	•	•	•	•	•	•						
0547	GAS FILTER	60037309		•	•	•	•	•	•	•	•	•	•	•	•	•						
0548	SHEET GASKET D: 24-18.2-1.5	60022835-01		•	•	•	•	•	•	•	•	•	•	•	•	•						
0550	BEND RETURN	61010055		•	•	•	•	•	•	•	•	•	•	•	•	•						
0551	GAS TUBE	60000599		•	•	•	•	•	•	•	•	•	•	•	•	•						12/06
	GAS TUBE	61010040		•	•	•	•	•	•	•	•	•	•	•	•	•						11/06
0553	WATER FILTER	61007727							•	•	•					•						
0558	PUMP LEAD (2 SPEEDS)	61004115		•	•	•	•	•	•	•	•	•	•	•	•	•						
0559	O-RING D: 45-3.5	61009833-46		•	•	•	•	•	•	•	•	•	•	•	•	•						
0560	AIR SEPARATOR HEAD ASSEMBLY	61002653		•	•	•	•	•	•	•	•	•	•	•	•	•						
0561	RIGHT HAND HYDRAULIC BLOCK	61010167		•	•	•	•	•	•	•	•	•	•	•	•	•						
0562	TEMPERATURE PROBE + CLIP	990686		•	•	•	•	•	•	•	•	•	•	•	•	•						
0564	O-RING D: 24.6-3.6	61009834-30		•	•	•	•	•	•	•	•	•	•	•	•	•						
0565	HEATING FILTER	61305560		•	•	•	•	•	•	•	•	•	•	•	•	•						
0567	CLIP	60030898-03		•	•	•	•	•	•	•	•	•	•	•	•	•						
0569	EXCHANGER GASKET	65104334		•	•	•	•	•	•	•	•	•	•	•	•	•						
0570	HEATING RETURN TUBE	61010043		•	•	•	•	•	•	•	•	•	•	•	•	•						
0571	O-RING D: 16-1.9	61009833-37		•	•	•	•	•	•	•	•	•	•	•	•	•						
0572	PUMP UP 15/50 230V	61010612		•	•	•	•	•	•	•	•	•	•	•	•	•						
0573	CAPACITOR	61000652-10		•	•	•	•	•	•	•	•	•	•	•	•	•						
0574	PLUG M 10-100	60015709		•	•	•	•	•	•	•	•	•	•	•	•	•						
0578	O-RING D: 5.7-1.9	60024164-10		•	•	•	•	•	•	•	•	•	•	•	•	•						

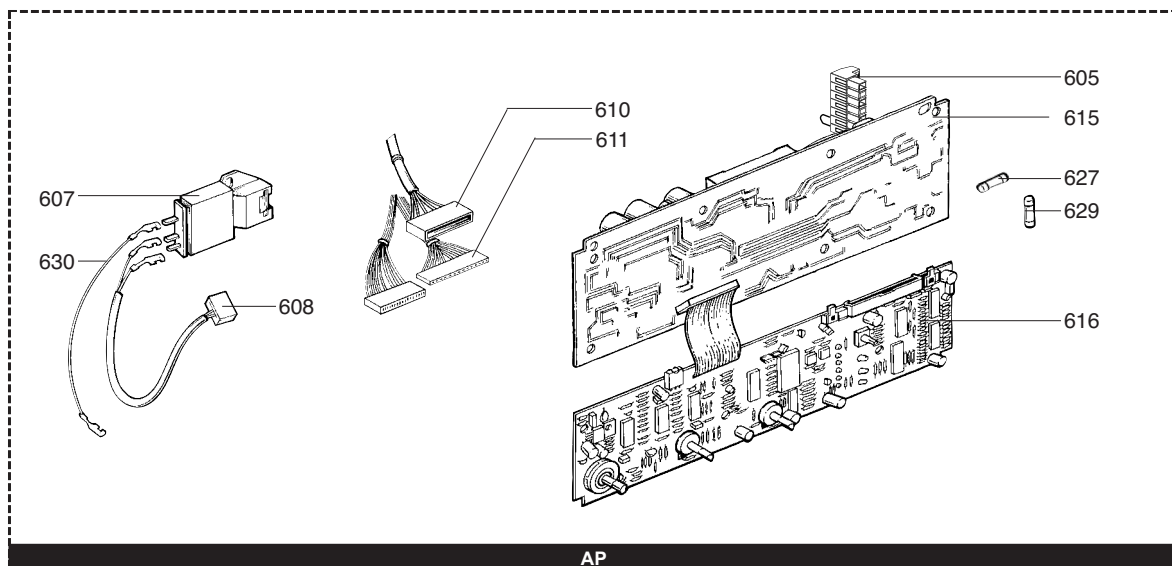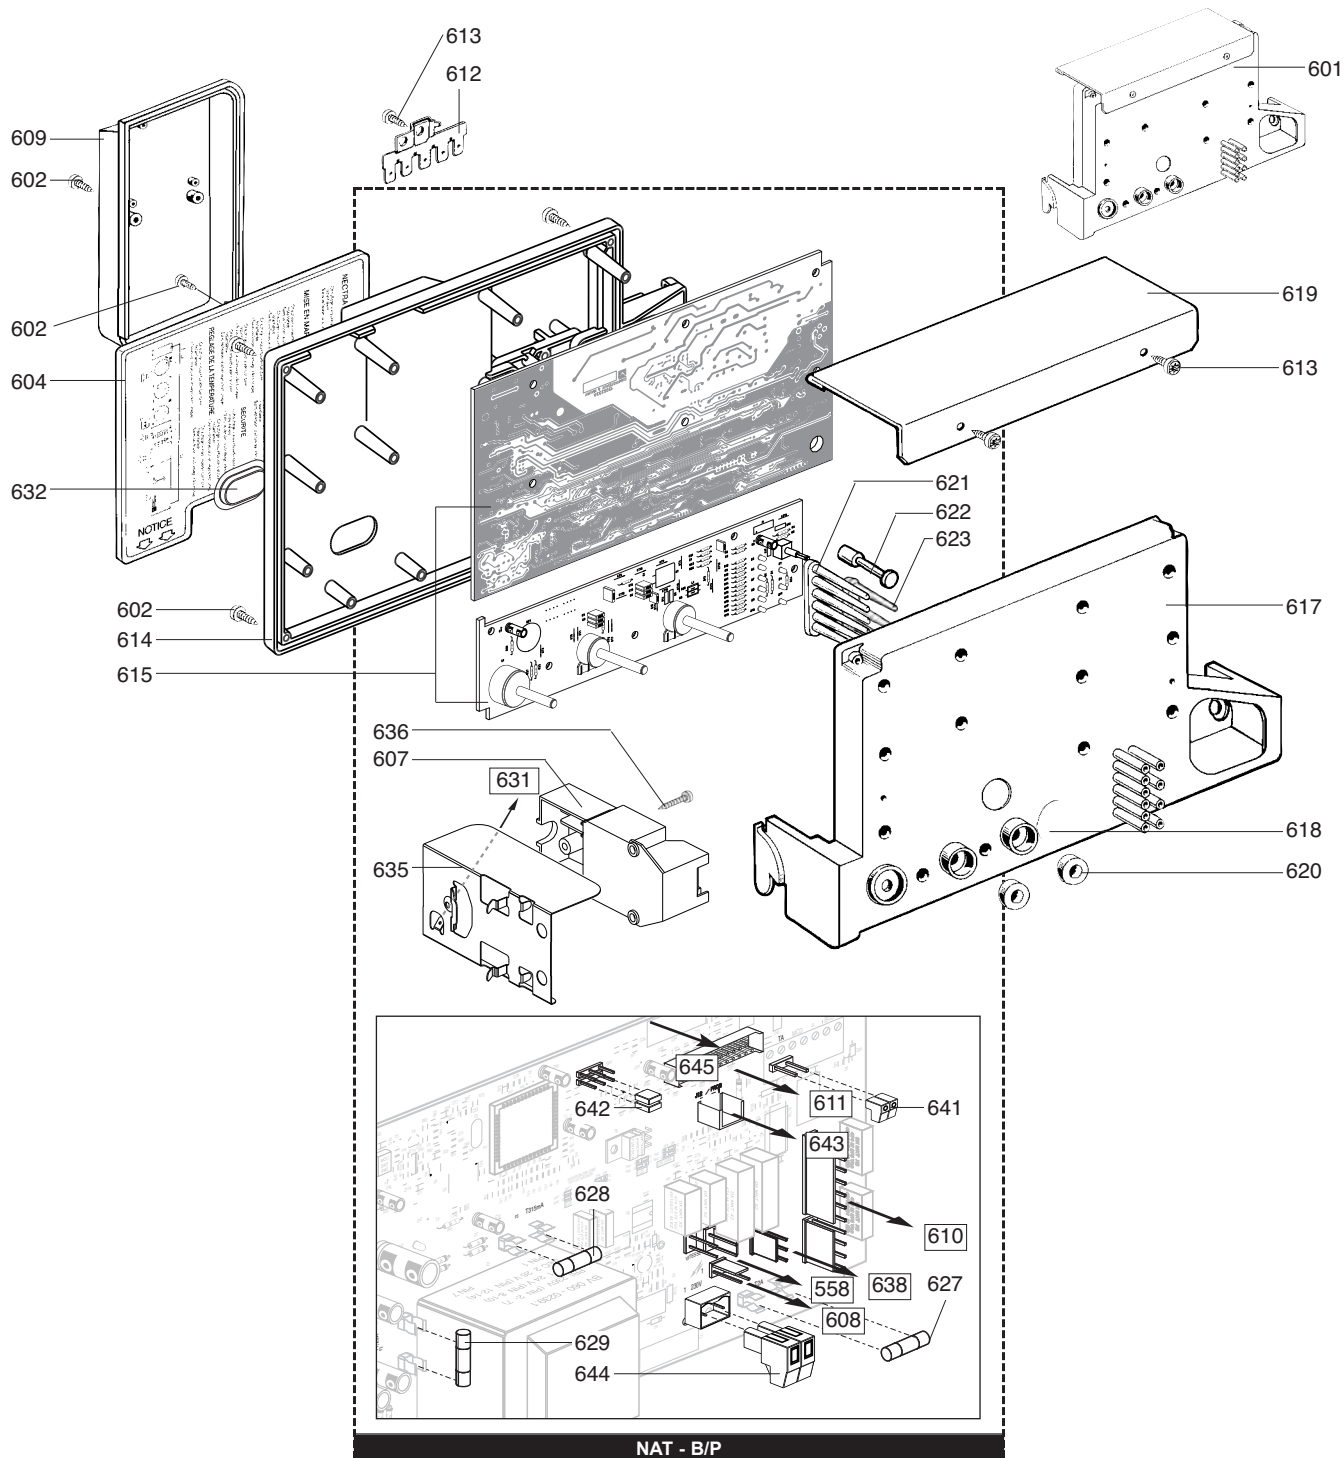


				CENTORA 1.14 CF CENTORA 3.14 CF CENTORA 3.14 VMC CENTORA 1.14 CF CENTORA 1.14 FF CENTORA 2.24 CF CENTORA 2.24 VMC CENTORA 2.24 FF CENTORA 3.24 CF CENTORA 3.24 VMC CENTORA 3.24 FF CENTORA 2.28 CF CENTORA 2.28 FF																		
	Description	Manf. Pt. N	Type	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	31
0600	ELECTRICAL BOX																					
0601	ELECTRICAL BOX	61010900	AP																			
	ELECTRICAL BOX	61306778	B/P-NAT																			
0602	SCREW FX90 L:16	61020510																				
0604	INSTRUCTIONS SUPPORT	61306011																				
	INSTRUCTIONS SUPPORT	61307953																				
	INSTRUCTIONS SUPPORT	61307954																				
0605	CONNECTOR	61010349																				
0607	IGNITER	61002105-20																				
	IGNITER	61002105-20	AP																			
0608	IGNITOR CABLE	61010151	AP																			
	IGNITOR CABLE	61015739	B/P-NAT																			
0609	CONNECTOR COVER	61010014																				
0610	FAN CABLE	61010332																				
	CONNECTOR	61303358																				
0611	WIRE ASSEMBLY	60000593																				
	WIRE ASSEMBLY	60000594																				
	WIRE ASSEMBLY	60000595																				
	WIRE ASSEMBLY	60000596																				
	WIRE ASSEMBLY	60000598																				
	WIRE ASSEMBLY	60000600																				
	WIRE ASSEMBLY	61304575																				
	WIRE ASSEMBLY	61304576																				
	WIRE ASSEMBLY	61307684																				
	WIRE ASSEMBLY	61307951																				
	WIRE ASSEMBLY	61307952																				
	WIRE ASSEMBLY	61307958																				
	WIRE ASSEMBLY	61307968																				
	WIRE ASSEMBLY	61010884	AP																			
	WIRE ASSEMBLY	61010915	AP																			
	WIRE ASSEMBLY	61016315	AP																			
	WIRE ASSEMBLY	60000594	B/P-NAT																			
	WIRE ASSEMBLY	60000595	B/P-NAT																			
	WIRE ASSEMBLY	61304575	B/P-NAT																			
	WIRE ASSEMBLY	61304576	B/P-NAT																			
	WIRE ASSEMBLY	60000597	NAT																			
	WIRE ASSEMBLY	61306314	NAT																			
0612	CONNECTION STRIP	61010152																				
0613	TAPPING SCREW TCBL D:4 L:10	61020509																				
0614	ELECTRICAL BOX COVER	61010007																				
0615	PRINTED CIRCUIT BOARD OF POWER	61018121-01	AP																			
	PRINTED CIRCUIT BOARDS	60000602	B/P-NAT																			
	PRINTED CIRCUIT BOARDS	61308277	B/P-NAT																			
0616	PRINTED CIRCUIT BOARD OF REGU.	61010047	AP																			
0617	ELECTRIC BOX PLATE	61010006																				
0618	PLUG	61011316																				
0619	PROTECTIVE PLATE	61010239																				
0620	CENTRING PIECE	61010241																				
0621	TRANSMITTER OF LEDS - TEMPERA.	61303699																				
0622	IGNITION PUSH ROD	61010072																				
0623	TRANSMITTER OF LEDS - ON/OFF	61303700																				
0627	FUSE 250V 2A - TEMPORIZED	61003456																				
0628	FUSE 250V 0.315A - TEMPORIZED	61307845																				
0629	FUSE 250V 1.25A - TEMPORIZED	61003635																				
0630	EARTH WIRE	61011585																				
0631	EARTH WIRE	61305498																				
0632	CLOSURE PLATE	61304599																				
0635	SUPPORT BRACKET	61304977																				
0636	TAPPING SCREW D: 3.5-9.5	61015329																				
0638	CABLE THREE WAY VALVE	61305893																				
	CABLE THREE WAY VALVE	61312615																				
0641	CONTACT SOCKET CONNECTOR 2 P.	61307926																				
0642	BLACK SHUNT	61400030																				
0643	CONTACT SOCKET CONNECTOR 3 P.	61003209																				
0644	FEEDER	61302102																				
	CONNECTING TERMINAL	61308032																				
0645	CABLE (P.C.B.)	60000179																				

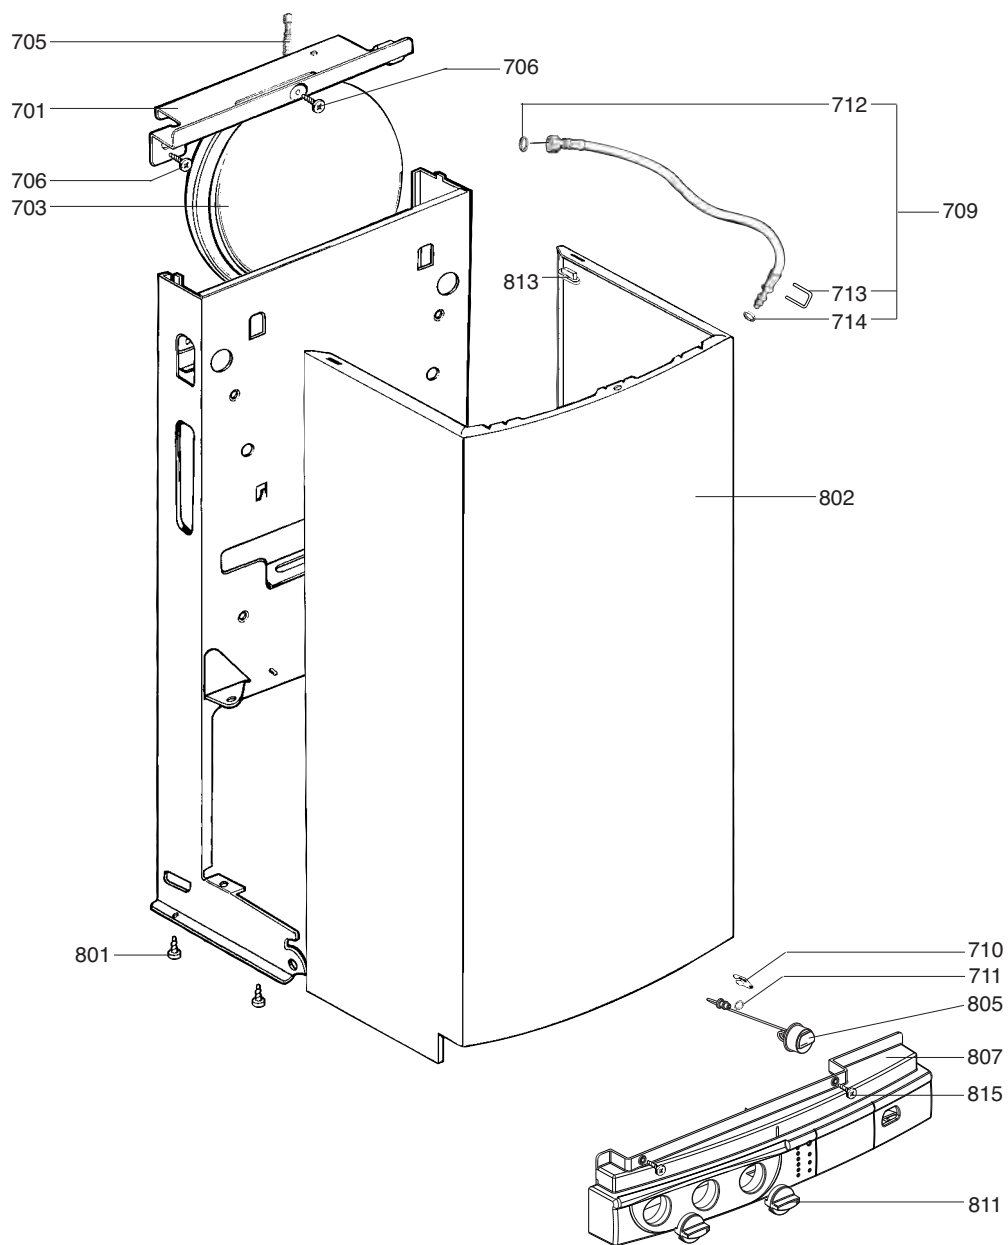


CENTORA

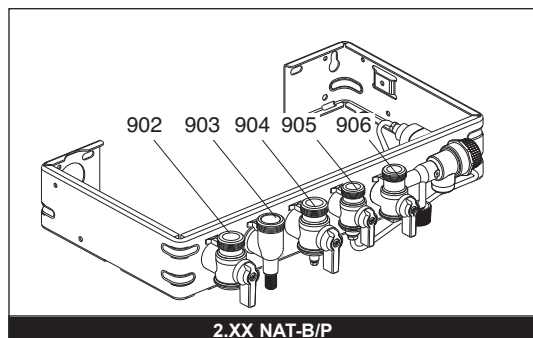




2.XX NAT-B/P

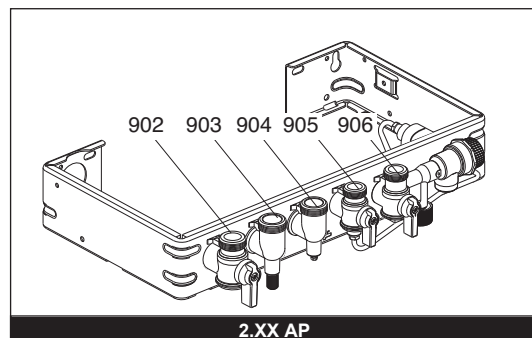

2.XX AP

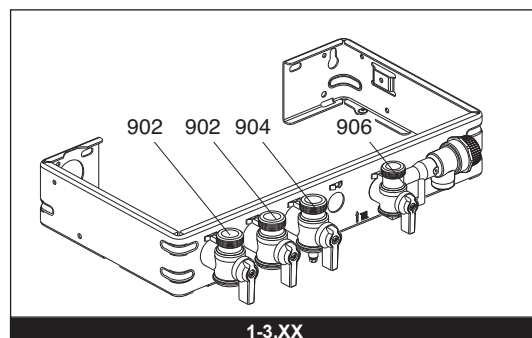








1-3.XX

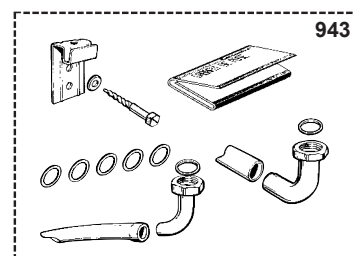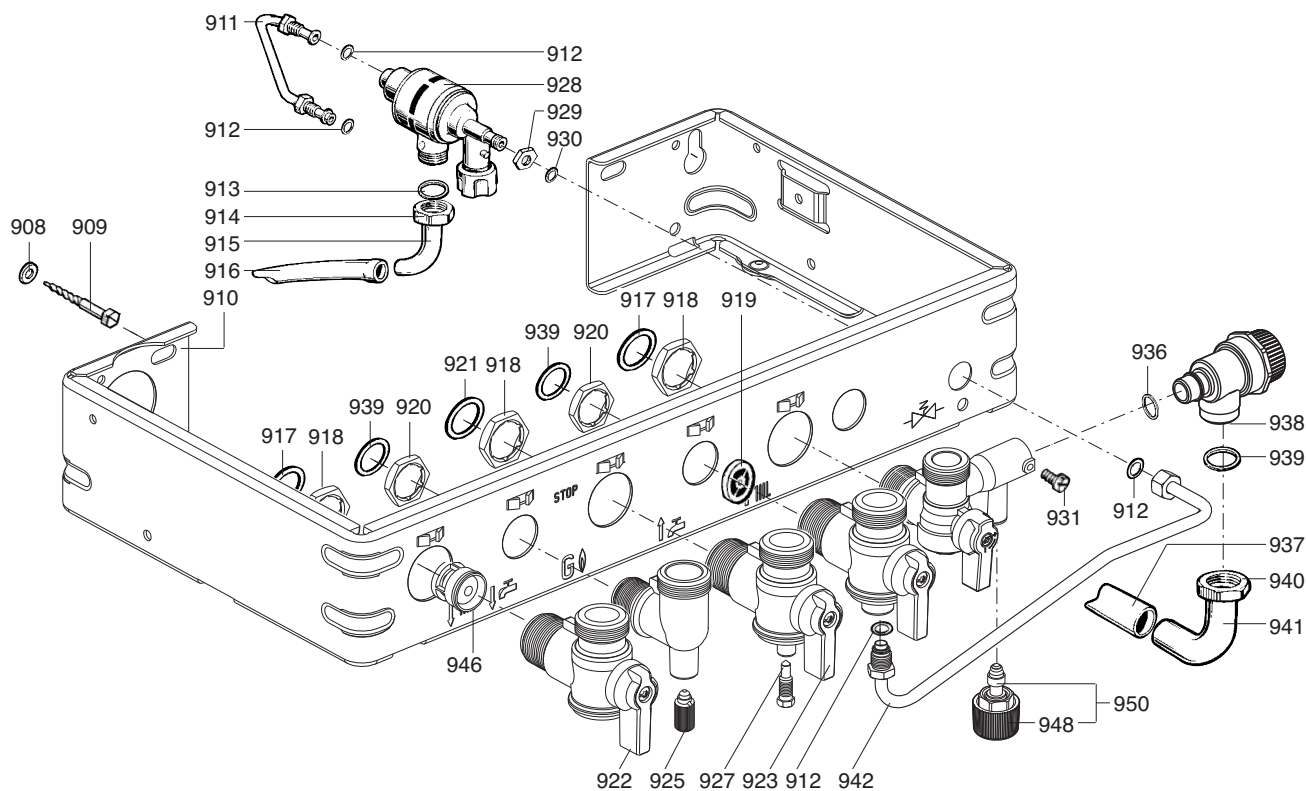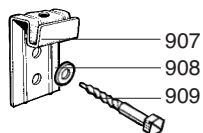






943

Domestic Gas Boilers

5000

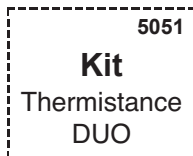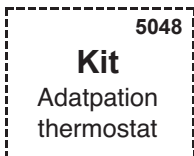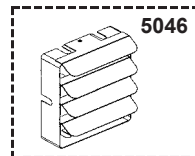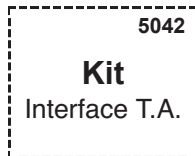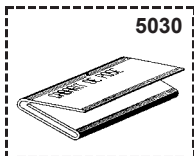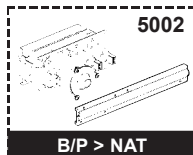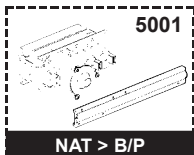

6000

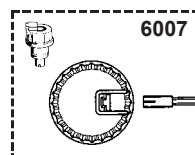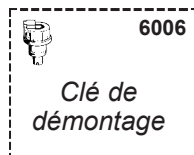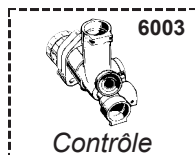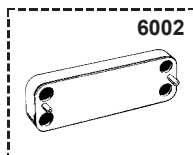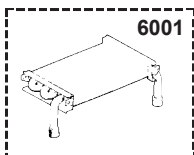

CENTORA

LIST OF THE ABBREVIATIONS

HW	: Hot water.
CW	: Cold water.
C	: Ceramic resistance (normal heating).
Ca	: Ceramic resistance (accelerated heating)
TP	: Immersion heater.
1F	: With fittings.
2F	: Without fittings.
3F	: With fittings and another outlet connection.
AMI	: With mixing valve.
SMI	: Without mixing valve.
PUISS	: Power of th appliance.
PN	: Appliance with normal pression.
LP	: Appliance with low pression.
PV	: Appliance with variable power.
PF	: Appliance with fixed power.

IDENTIFICATION PLATE

SERIAL NUMBER

10 Characters :	04 05 125 011	
	_____	Sequential number
	_____	Manufacturing day
	_____	Year of manufacture
11 Characters :	1 95 065004 - 31	
Month of manufacture : _____	_____	Technical number of the appliance
from 1 to 9 → Jan. to Sep.,	_____	Sequential number
O → Oct., N → Nov.,	_____	Year of manufacture
D → Dec.	_____	
19 Characters :	08 05 0013199 900640031	
Year of manufacture _____	_____	Product reference
Month of manufacture _____	_____	Sequential number
20 Characters :	3675007 XX 2 07 070 00315	
Product reference _____	_____	Sequential number
Millenium of manufacture _____	_____	Manufacturing day
	_____	Year of manufacture
21 Characters :	3675007 XX 07 070 0000315	
Product reference _____	_____	Sequential number
Year of manufacture _____	_____	Manufacturing day

The indications mentioned on the prices, commercial or technical literature and the scheme are written for your guidance and are available at a given time. The CONSTRUCTOR retains the power to modify the presentation, the form, the size, the conception or the material of the products.